
Habasit – Solutions in motion



## Habasit Saniclip

### **Cleaning Made Easy**

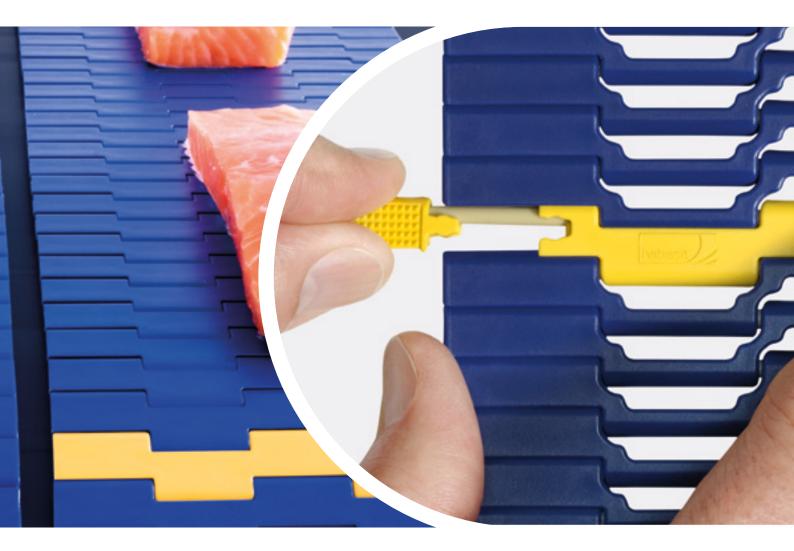

# Quick belt opening system for HabasitLINK<sup>®</sup>

Habasit Saniclip is an innovative device for quick belt assembly and easy belt sanitation. It allows simple rod installation and removal in applications where frequent belt sanitation is required. Multiple Habasit Saniclips can be installed in a single belt to allow easy opening at several positions.

- Reduced downtime
- Extracted or installed in seconds
- No tools required
- Skilled personnel not required





Habasit Saniclip makes belt opening and installation for frequent cleaning simpler and more reliable than ever before.



Habasit Saniclip solves the problem of timeconsuming belt removal and eliminates the need for extraction tools so operators can stay focused on safe sanitation practices.



The Habasit Saniclip plug can be manually extracted and reinstalled by line operators in a matter of seconds without any tools.



Plug / lever and rod are combined to prevent accidental loss of components.






#### Quick belt opening

Anything that can enhance the ease of sanitation processes in the food industry is a welcome and valuable improvement. This is where the Habasit Saniclip comes in. It's innovative rod retaining system is designed for easy and quick belt installation. Opening the belt without tool allows that the belt can be taken off the conveyor within seconds. In demanding sanitary environments this is a inimitable advantage of this system.

Experience confirms that at least 20 minutes are required for the maintenance staff to normally arrange for proper tooling and to open a standard belt. Habasit Saniclip is robust and designed for easy manual extraction even in wet and fatty environments. Line operators will be able, without tooling, to easily and quickly open the belt.

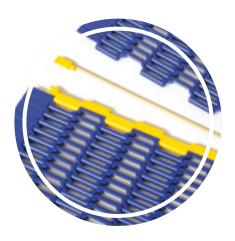




#### Extracted and reinstalled in seconds

Habasit Saniclip can be manually extracted and reinstalled directly by line operators in a matter of seconds, without any tools.

#### Two different opening systems have been developed in order to better fit with the belt pitch.

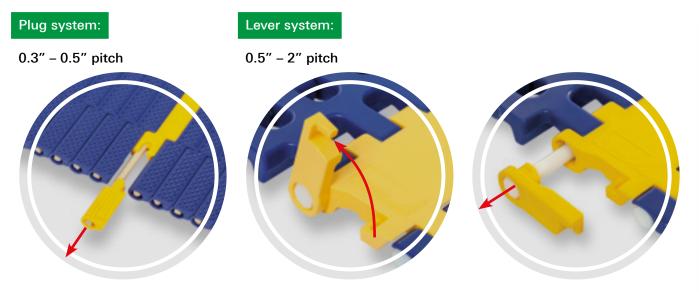

Plug / lever and rod are interconnected as a single assembly to prevent accidental loss of components.







#### Examples

Habasit Saniclip is usable in any application that requires an enhancement of sanitation processes in the food industry, or requires a quick belt opening for maintenance operations.

- Red Meat
- Poultry
- Fish
- Bakery
- Dairy

•

• Confectionery












M0870 Micropitch Flat Top 0.3"




M1065 HyCLEAN Flat Top 0.5"

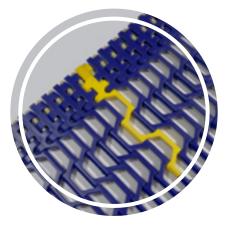

M1185 Flush Grid 0.5"




M1220 Flat Top 0.5"

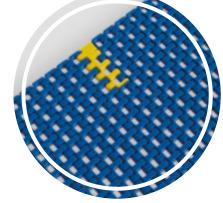

SM605/CM605 Smooth/Curved Mesh 0.5"



M2510 Flat Top 1"

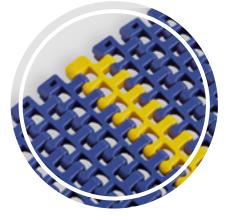

M2540 Radius Flush Grid 1"



IS610 Radius Flush Grid 1"



M5010/M5060 Flat Top 2"



M5085 Flush Grid 2"

#### Available configurations

Pitch		Saniclip	Compatibility	System	Module width		Material / Color
mm	inch				mm	inch	
8.0 mm	0.3″	M0870	M0863	Plug	203 mm	8″	
			M0870				••
			M0876				
			M0885				
12.7 mm	0.5″	M1065	M1065	Plug	254 mm	10″	
12.7 mm	0.5″	M1185	M1185	Plug	127 mm	5″	•
12.7 mm	0.5″	M1220	M1220	Lever	50 mm / 100 mm	1.97″ / 3.94″	
			M1230				
			M1233				
			M1234				
12.7 mm	0.5″	SM605	SM605	Plug	51 mm	2″	• •
			CM605				
25.4 mm	1"	M2510	M2510	Lever	50 mm	1.97"	•
			M2511				
			M2514				
			M2516				
			M2533				
25.4 mm	1″	M2540	M2540	Lever	130 mm	5.12″	•
25.4 mm	1″	IS610	IS610	Lever	76 mm	3″	
			CT610				• •
50.8 mm	2"	M5010	M5010	Lever	150 mm	5,91"	
			M5011				
			M5013 M5014				
			M5014				
50.8 mm	2″	M5060	M5060	Lever	152 mm	6″	
			M5064				
			M5067				
			M5085				

POM - yellow

PA - blue (on request)

#### Habasit International AG Römerstrasse 1

CH-4153 Reinach, Switzerland • +41 61 715 15 15 +41 61 715 15 55 habasit.com

#### Need local support? Scan now



Registered trademarks Copyright Habasit International AG Subject to alterations 4347BRO.MOD-en0425HQR

Information provided herein does not constitute legal representations or warranties and may change without notice.

Please refer to the specifications/disclaimers provided in the respective product data sheets.